

PLEASE POST — HANDLING INSTRUCTIONS



The only technology available to monitor for, immediately detect, and prove tobacco and marijuana smoking

Important information for housekeeping and/or any staff that uses cleaning products in rooms monitored by the FreshAir Smoking Detection System.

FreshAir devices and sensors require careful handling for optimized performance, sensor life, and device longevity. Damage from certain cleaning chemicals will shorten sensor life.

»»»»» **Note the location of FreshAir devices in the room.** «««««

Do not dispense any liquids, aerosol cleaning products, and/or air fresheners on or near FreshAir devices. Liquids and sprays can damage the internal electronics of the device.




When cleaning near FreshAir devices, spray liquids into a towel away from the device and then wipe down the surrounding area.



Avoid cleaning products that contain bleach, ammonia, and sodium hydroxide in rooms with FreshAir devices or in adjacent bathrooms and hallways.

Remove the FreshAir device from the room prior to using an ionizer or ozone generator. Wait 6 hours after the machine has completed running prior to returning the FreshAir device to the room.

Dust the exterior of a device or gently wipe down the exterior with a damp rag or towel, avoiding the use of cleaning chemicals. **The sensor cartridges or interior of the device should never be cleaned or wiped down.**

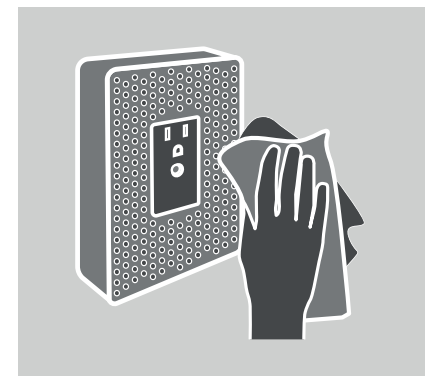

Download a list in the FreshAir Portal Help Center of **recommended cleaning products and products to avoid.**

Please contact FreshAir Support with any questions.